



DOOR CLOSER WITH SLIDING ARM FUNCTION 100-935, 101-272

Standard Installation of the body on hinge side











Remark: Suitable for use on single leaf single action swing timber fire door. The

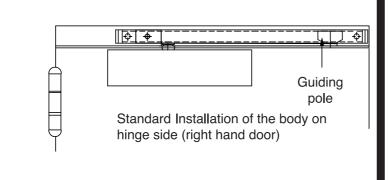


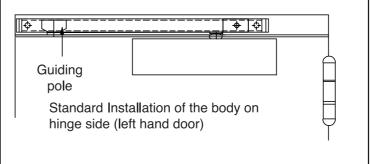



EN	Max. weight of door (kg)	Max. width of door (mm)
EN 3 fixe	65	1050


Be careful and do not to use a screwdriver to adjust the valves.


Do not completely loose the valves = there is a risk of leakage / damage to the goods

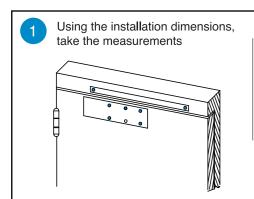


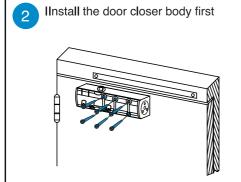


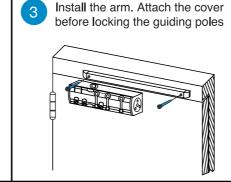


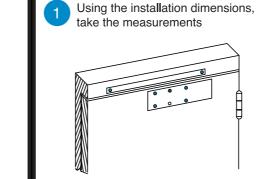


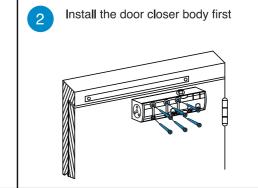


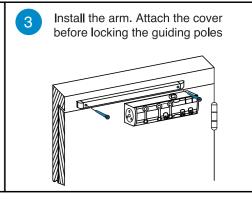


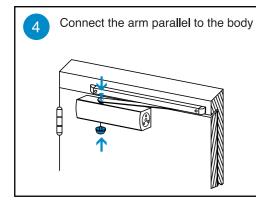

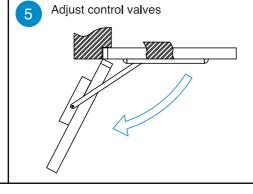

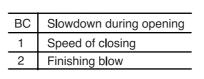


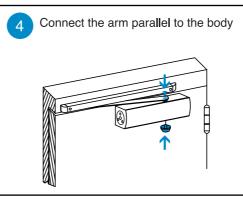


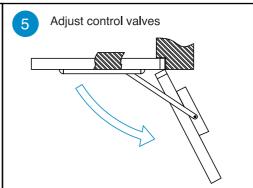


ВС	Slowdown during opening
1	Speed of closing
2	Finishing blow


ADJUSTMENTS

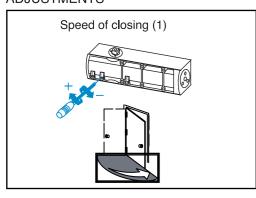


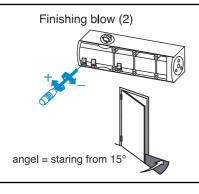


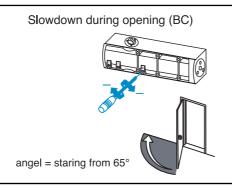

ADJUSTMENTS

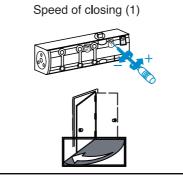

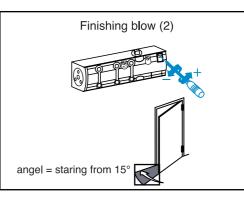

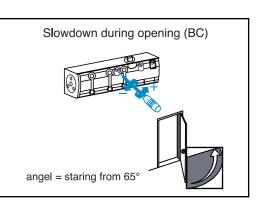





DOOR CLOSER WITH SLIDING ARM FUNCTION 100-935, 101-272

Installation of the body on the frame from the side opposite to the hinges













Remark: Suitable for use on single leaf single action swing timber fire door. The

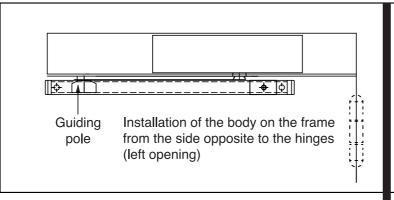


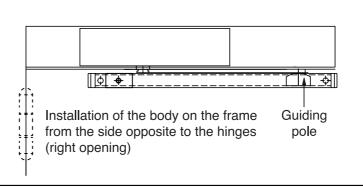



EN	Max. weight of door (kg)	Max. width of door (mm)
EN 3 fixe	65	1050


Be careful and do not to use a screwdriver to adjust the valves.


Do not completely loose the valves = there is a risk of leakage / damage to the goods

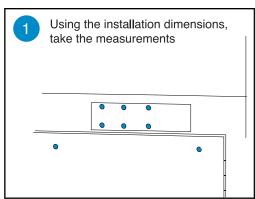


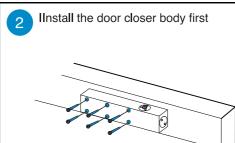


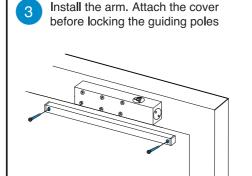


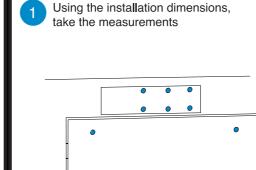

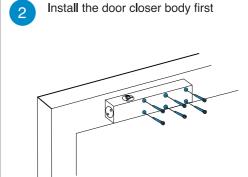


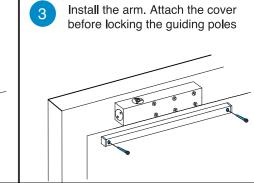

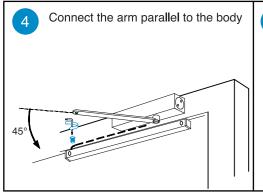


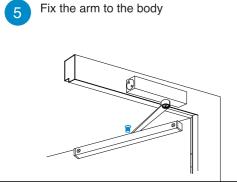

ВС	Slowdown during opening
1	Speed of closing
2	Finishing blow

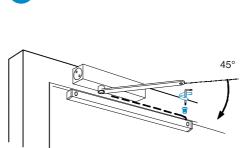



Connect the arm parallel to the body

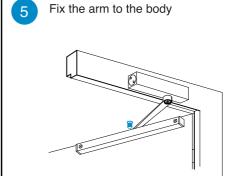



ВС	Slowdown during opening
1	Speed of closing
2	Finishing blow

ADJUSTMENTS

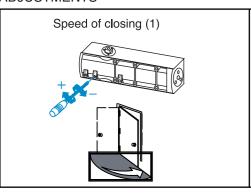

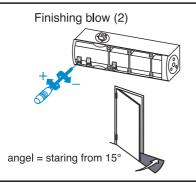

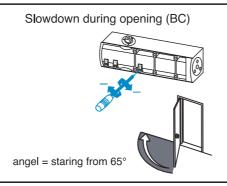

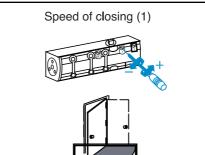

ADJUSTMENTS

