



Fluchttürhaube Typ K

Art.-Nr.: 901 500


Zunächst müssen Sie die optimale Befestigung für die Haube ermitteln. Dazu stülpen Sie die Haube über den Türgriff und sehen, wo genügend Platz zum Anbringen der Befestigungslaschen ist. (Zeichnung: Möglichkeiten 1–4). Liegt die Position fest, drücken Sie dort die Befestigungswinkel hinein. Bei den anderen Möglichkeiten klicken Sie die Endabschlüsse ein.

Die Befestigungswinkel haben drei verschiedene Möglichkeiten der Montage: Wenn Sie die erste bzw. zweite zum Einrasten wählen, sitzt die Haube nicht direkt auf der Tür, sondern es entsteht ein Spalt (bei unebenen Flächen unbedingt zu empfehlen). Bei der dritten Lösung befindet sich die Haube direkt auf der Tür. Hierzu nehmen Sie einen spitzen Gegenstand (z. B. Kugelschreiber, Schraubenzieher, Schere), drücken die eingerastete Befestigungslasche aus dem Vierkant und den Befestigungswinkel so tief in die Haube bis er in dem unteren Vierkant einrastet.

Jetzt die beiden grünen Unterplatten mit den beigegefügt Befestigungsschrauben auf der Tür anbringen. In eine grüne Unterplatte eine rote Oberplatte stecken, die Fluchttürhaube einführen und mit einer zweiten roten Oberplatte in der oberen Befestigung fixieren. Das mitgelieferte Piktogramm auf die Fluchttürhaube aufkleben.

Lieferumfang

- GfS Fluchttürhaube Typ K
- 2 Befestigungswinkel
- 3 Endabschlüsse
- 2 grüne Unterplatten
- 6 rote Oberplatten
- 1 Piktogramm

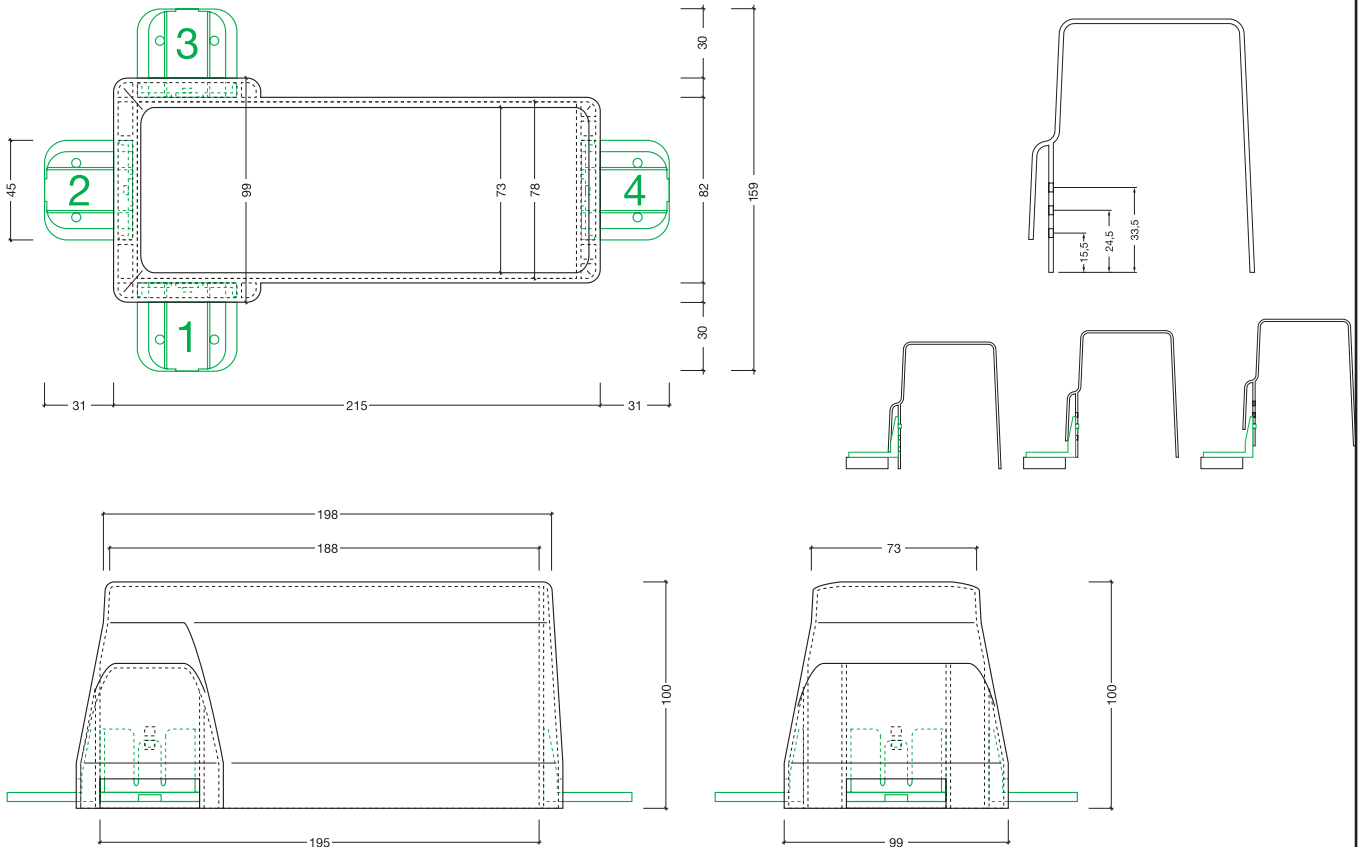

ENTSORGUNGSHINWEIS

Entsorgen Sie das Altgerät über eine Sammelstelle für **Elektronikschrott** oder über Ihren **Fachhändler**. Entsorgen Sie das **Verpackungsmaterial** in die **Sammelbehälter für Pappe, Papier und Kunststoffe**. Altgeräte dürfen nicht mit dem **Hausmüll** entsorgt werden.



GEWÄHRLEISTUNG

Innerhalb der gesetzlichen **Garantiezeit** beseitigen wir unentgeltlich die Mängel des Gerätes, die auf **Material- oder Herstellungsfehlern** beruhen, durch **Reparatur** oder **Umtausch**. Die Garantie erlischt bei **Fremdeingriff**.

KUNDENDIENST

Sollten trotz sachgerechter Handhabung **Störungen** auftreten oder wurde das Gerät **beschädigt**, wenden Sie sich bitte an folgende Adresse:



Cover Type K

Part No: 901 500

First, you need to determine where to fix the GfS Exit Cover K on the door. When putting the GfS Exit Cover over the door handle it becomes clear where there is enough space to fix the mounting brackets on the door (drawing: options 1–4). In these positions the mounting brackets are pressed into the opening of the GfS Exit Cover K. The end caps are clicked into all other holes, which are not used for the mounting.

The mounting brackets might be installed in three different positions: When selecting the first or second option, the GfS Exit Cover K is not sitting directly on the door (at uneven surfaces highly recommended). With the third option the GfS Exit Cover K sits directly on the door. To do this, take a pointed object (e.g. pen, screwdriver, scissors), press the fixing latch so far out of the square-end and the mounting bracket so deep into the GfS Exit Cover K that it snaps into the lower square-end.


The GfS Exit Cover Type K is used to secure door handles. The cover is made out of the transparent and unbreakable material Makrolon. In case of an emergency the cover can be lifted by force. The pins of the patented red clips break and the

cover falls down. The cover can be reused only the red upper plates have to be replaced.

1. Mount the two green under plates with the accompanying screws on the door.
2. Fix one red upper plate onto the lower green under plate. Insert the GfS Exit Cover K and fix the second red upper plate with the upper fastening lug onto the upper green under plate.
3. Glue the provided pictogram on the GfS Exit Cover K.

Delivery includes

- 1x GfS Exit Cover K
- 2x mounting brackets
- 3x end caps
- 2x green under plates
- 6x red upper plates
- 1x picto
- 4x screws

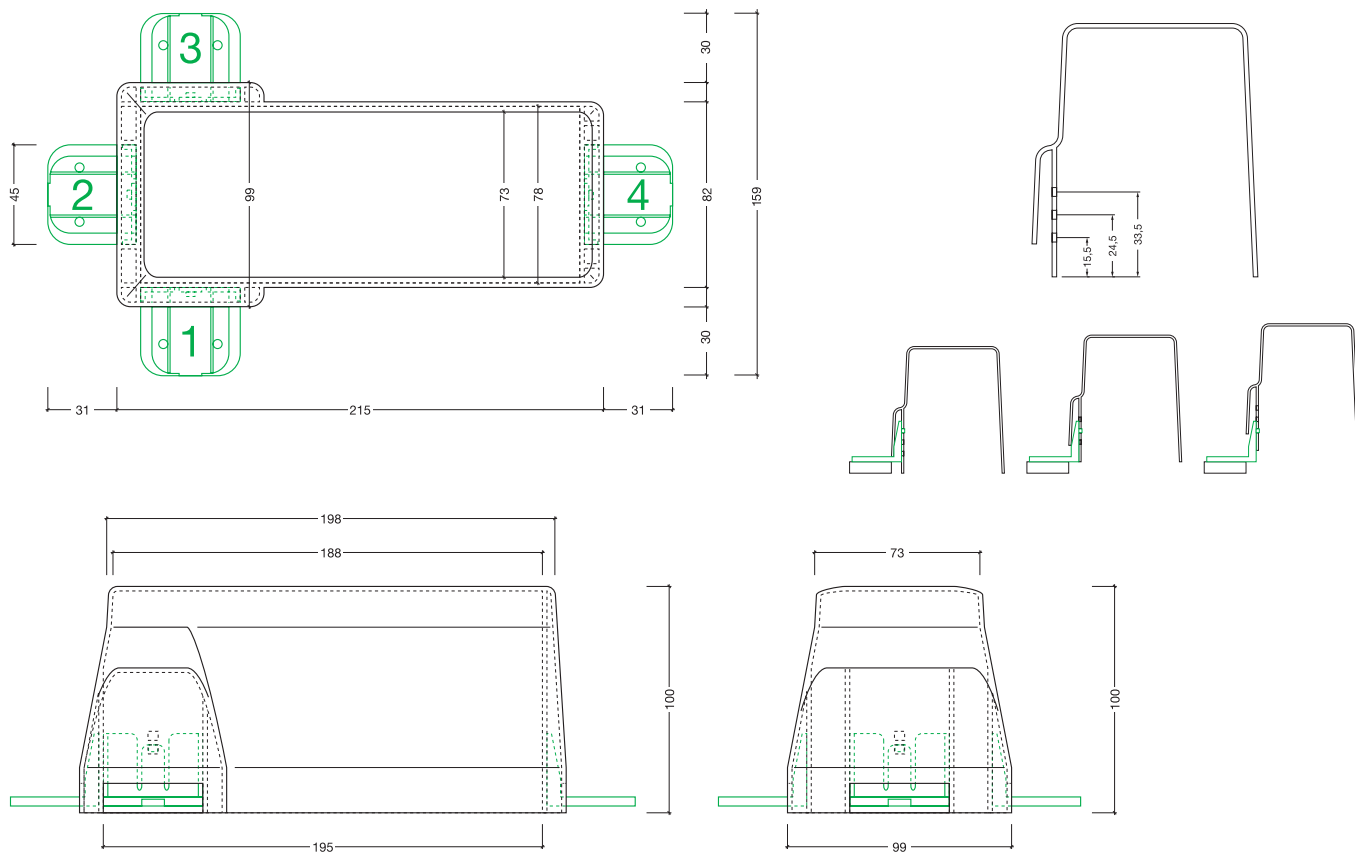

GENERAL INFORMATION

Waste electrical products should not be disposed of with household waste! Dispose of the waste product via a collection point for electronic scrap or via your specialist dealer. **Put the packaging material into the recycling bins for cardboard, paper and plastics.**



WARRENTY

Within the statutory warranty period we undertake to rectify free of charge by repair or replacement any product defects arising from material or production faults. Any unauthorized tampering with, or modifications to the product shall render this warranty null and void.

CUSTOMER SERVICE

If, despite correct handling, faults or malfunctions occur or if the product was damaged, please contact the company at the address below